
Welcome to our Ground post Estate gate installation guide


- To start with you need to cement the posts into the ground with the tops of the posts level.
- If you are fitting our standard 1780mm high gates, your post (on the highest ground) would usually be approx 1840mm from ground to top.
- The width between the posts is the size of the gates plus an extra 30-35mm for breather gaps (ie. On a 2400mm overall pair you would fit the posts 2430-2435mm apart)

Slightly angle the cement around the post to allow water to run away

Allow 75 mm minimum cement around the post

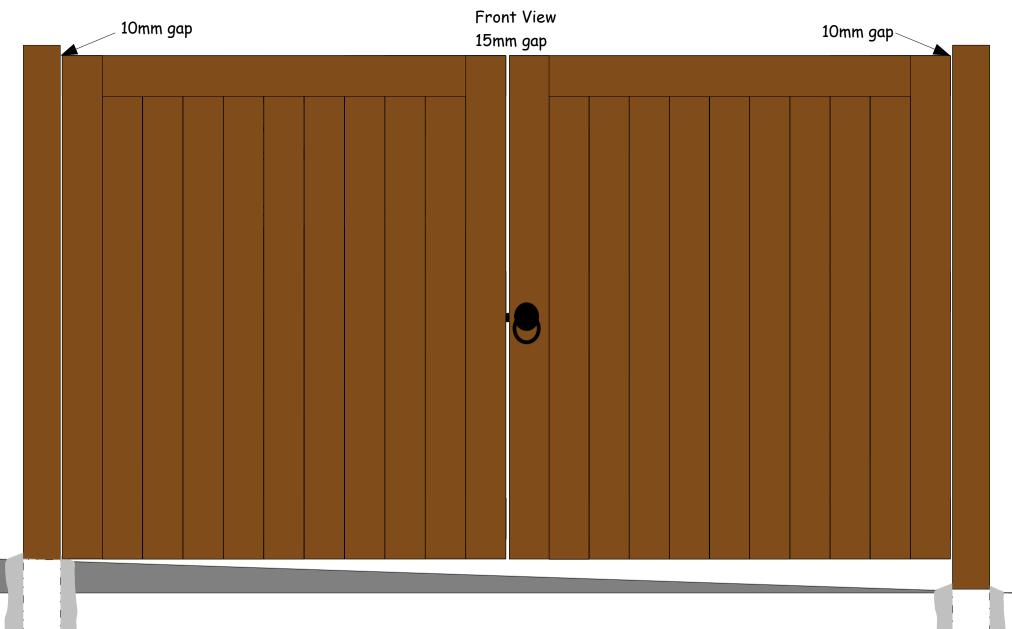

Now you can put the gates into position, use some pieces of wood to chock them off the ground and get them level.

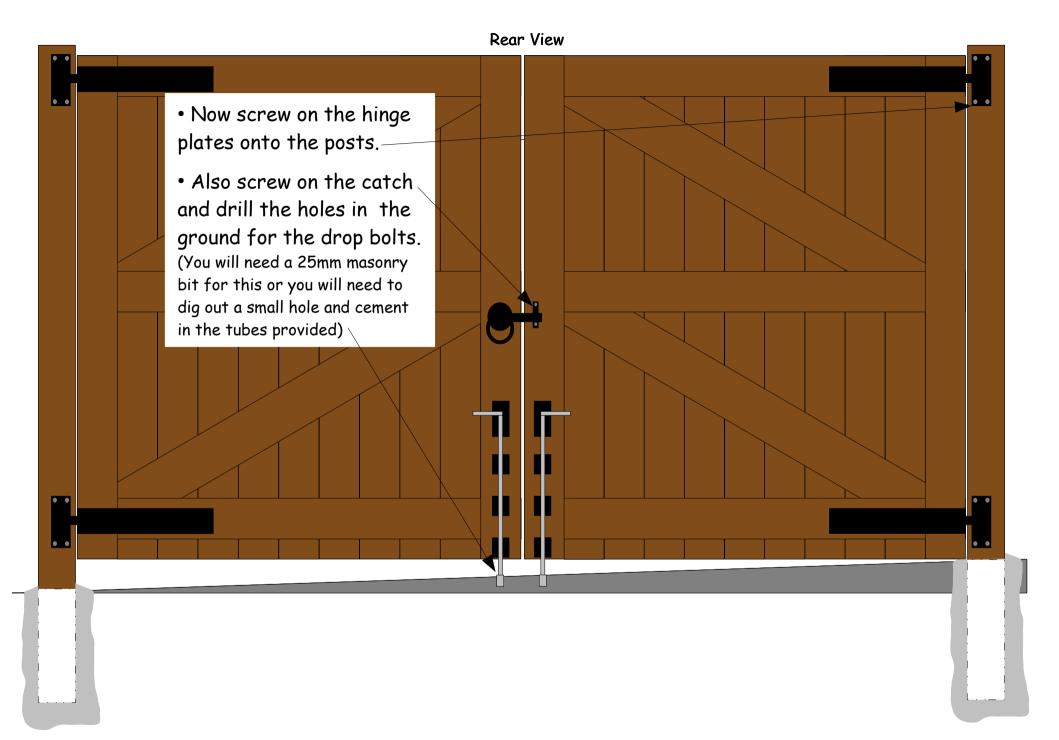

Congratulations You have finished the job