Welcome to our Ground post gate installation guide


Slightly angle the cement around the post to allow water to run away • To start with you need to cement the posts into the ground with the tops of the posts level.


• If you are fitting our standard 1780mm high gate, your post (on the highest ground) would usually be approx 1840mm from ground to top.

• The width between the posts is the size of the gate plus an extra 10mm either side for breather gaps (ie. On a 900mm gate you would fit the posts 920mm apart)

Allow 75 mm minimum cement around the post • Your now ready to position the gate using some scrap pieces of timber or wooden wedges.

• Adjust the gate so that it is level and the right height to clear the ground.

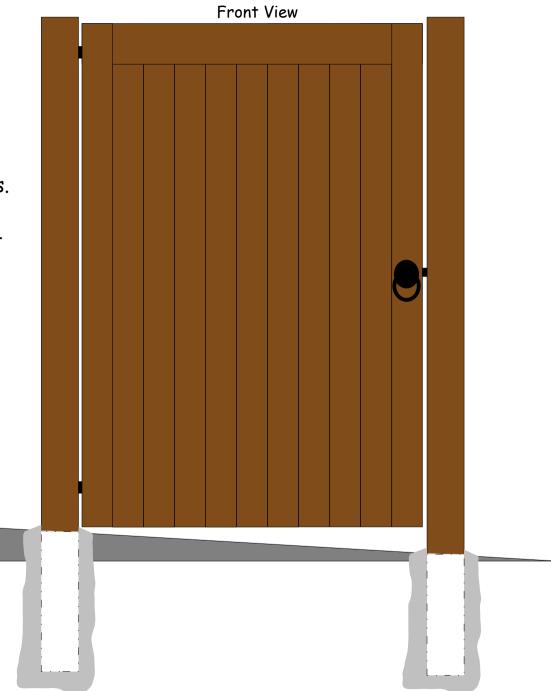

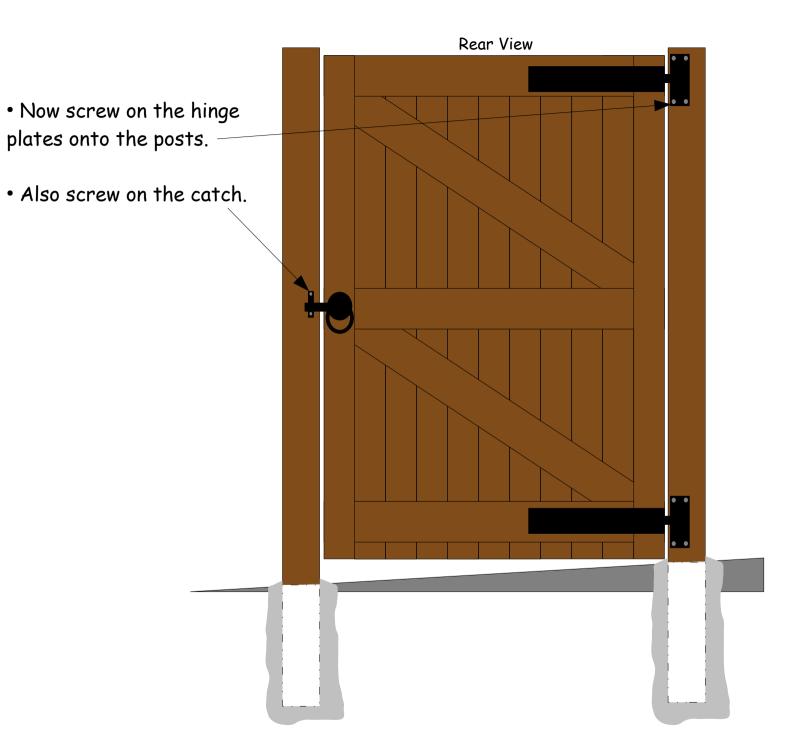

Congratulations You have finished the job

Now just close this window to return to our website