


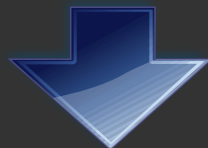
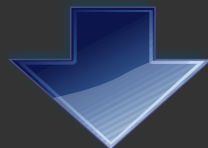


How do I work out my sizes?

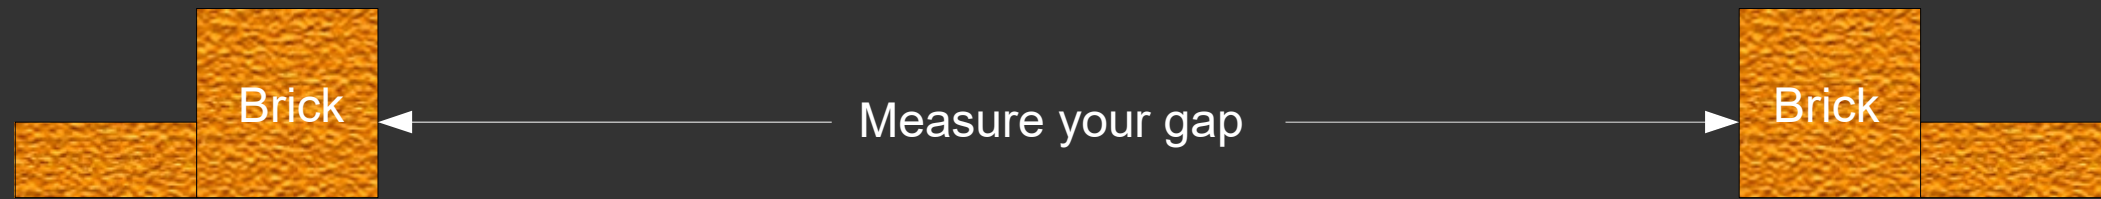


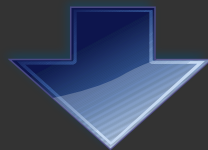


Deduct your frame size


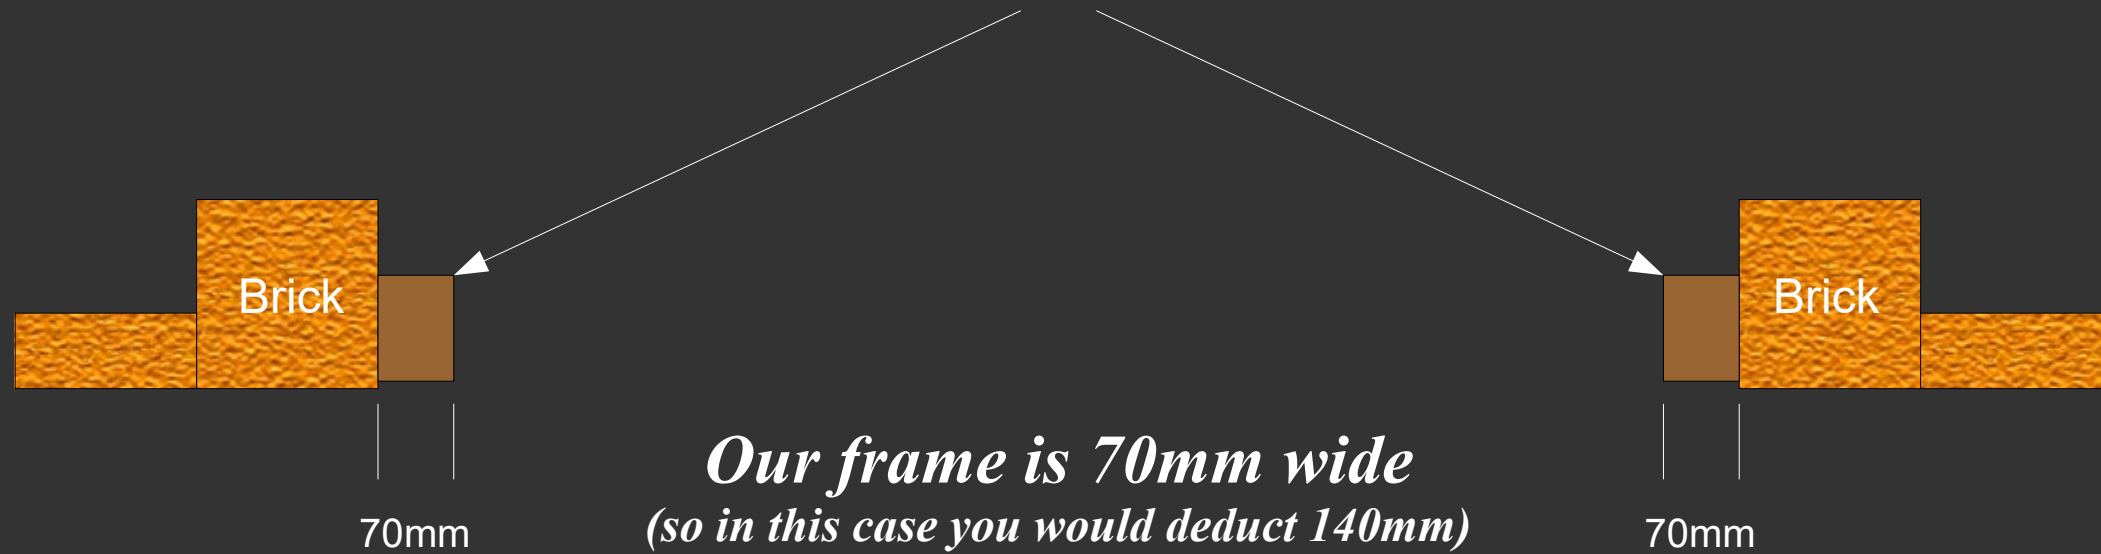





That will give you
This measurement
Which you need to
divide by 2

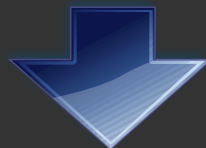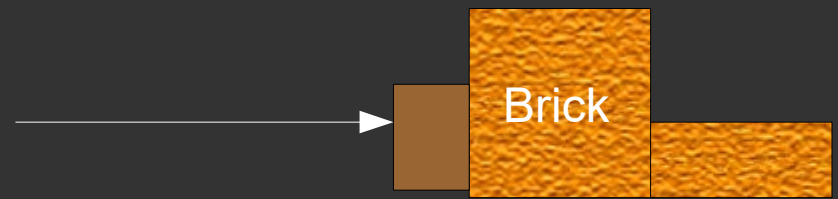


Now we know the width of each door

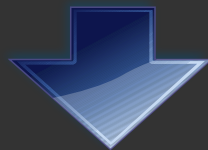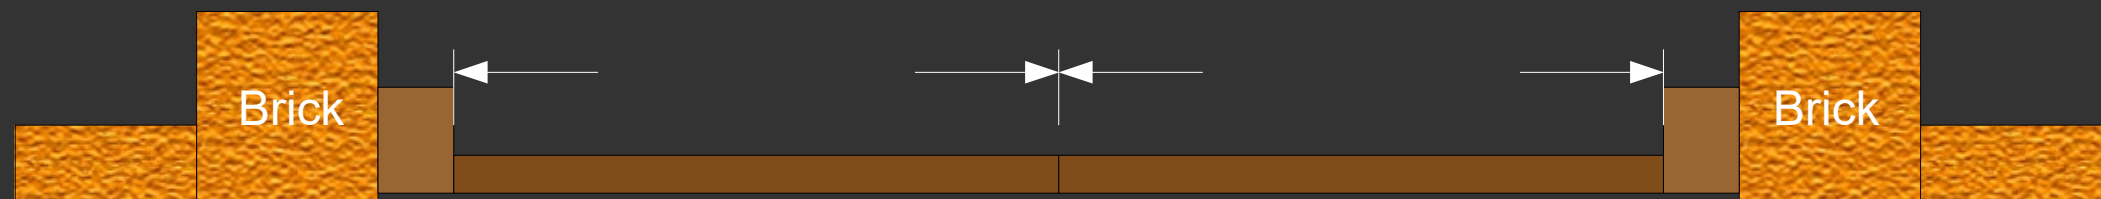


Now we cut a 15mm overlap rebate into the doors and this will also give the required 5mm breather gaps

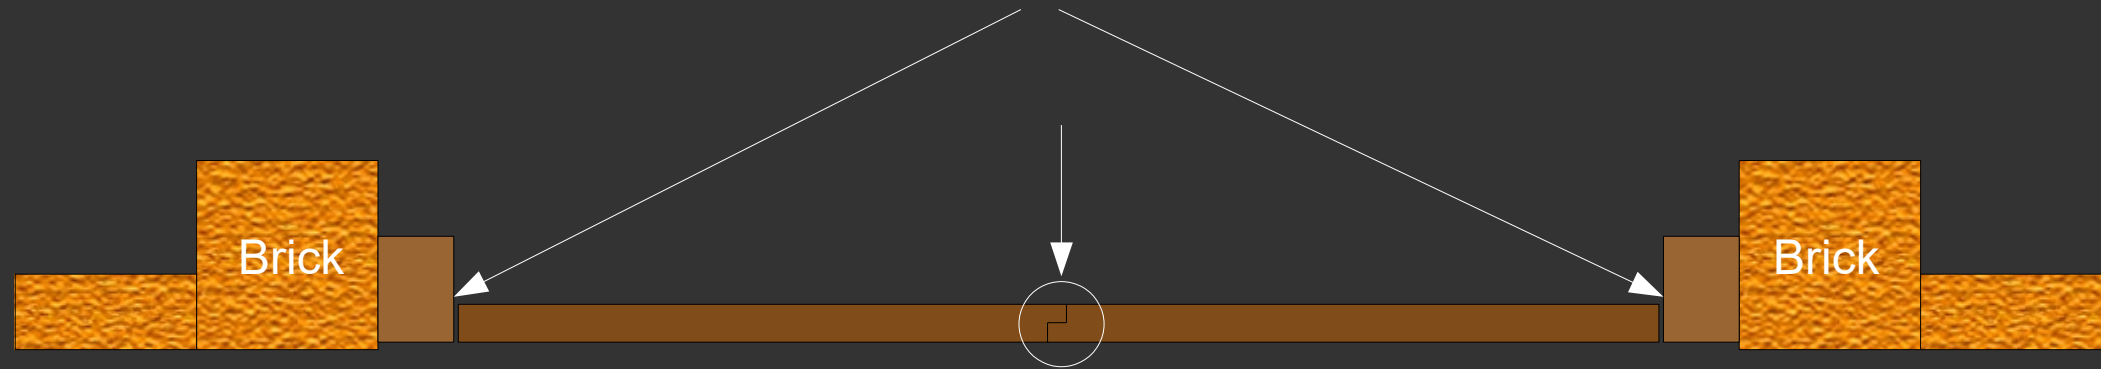

How do I work out my Height?

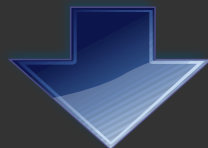

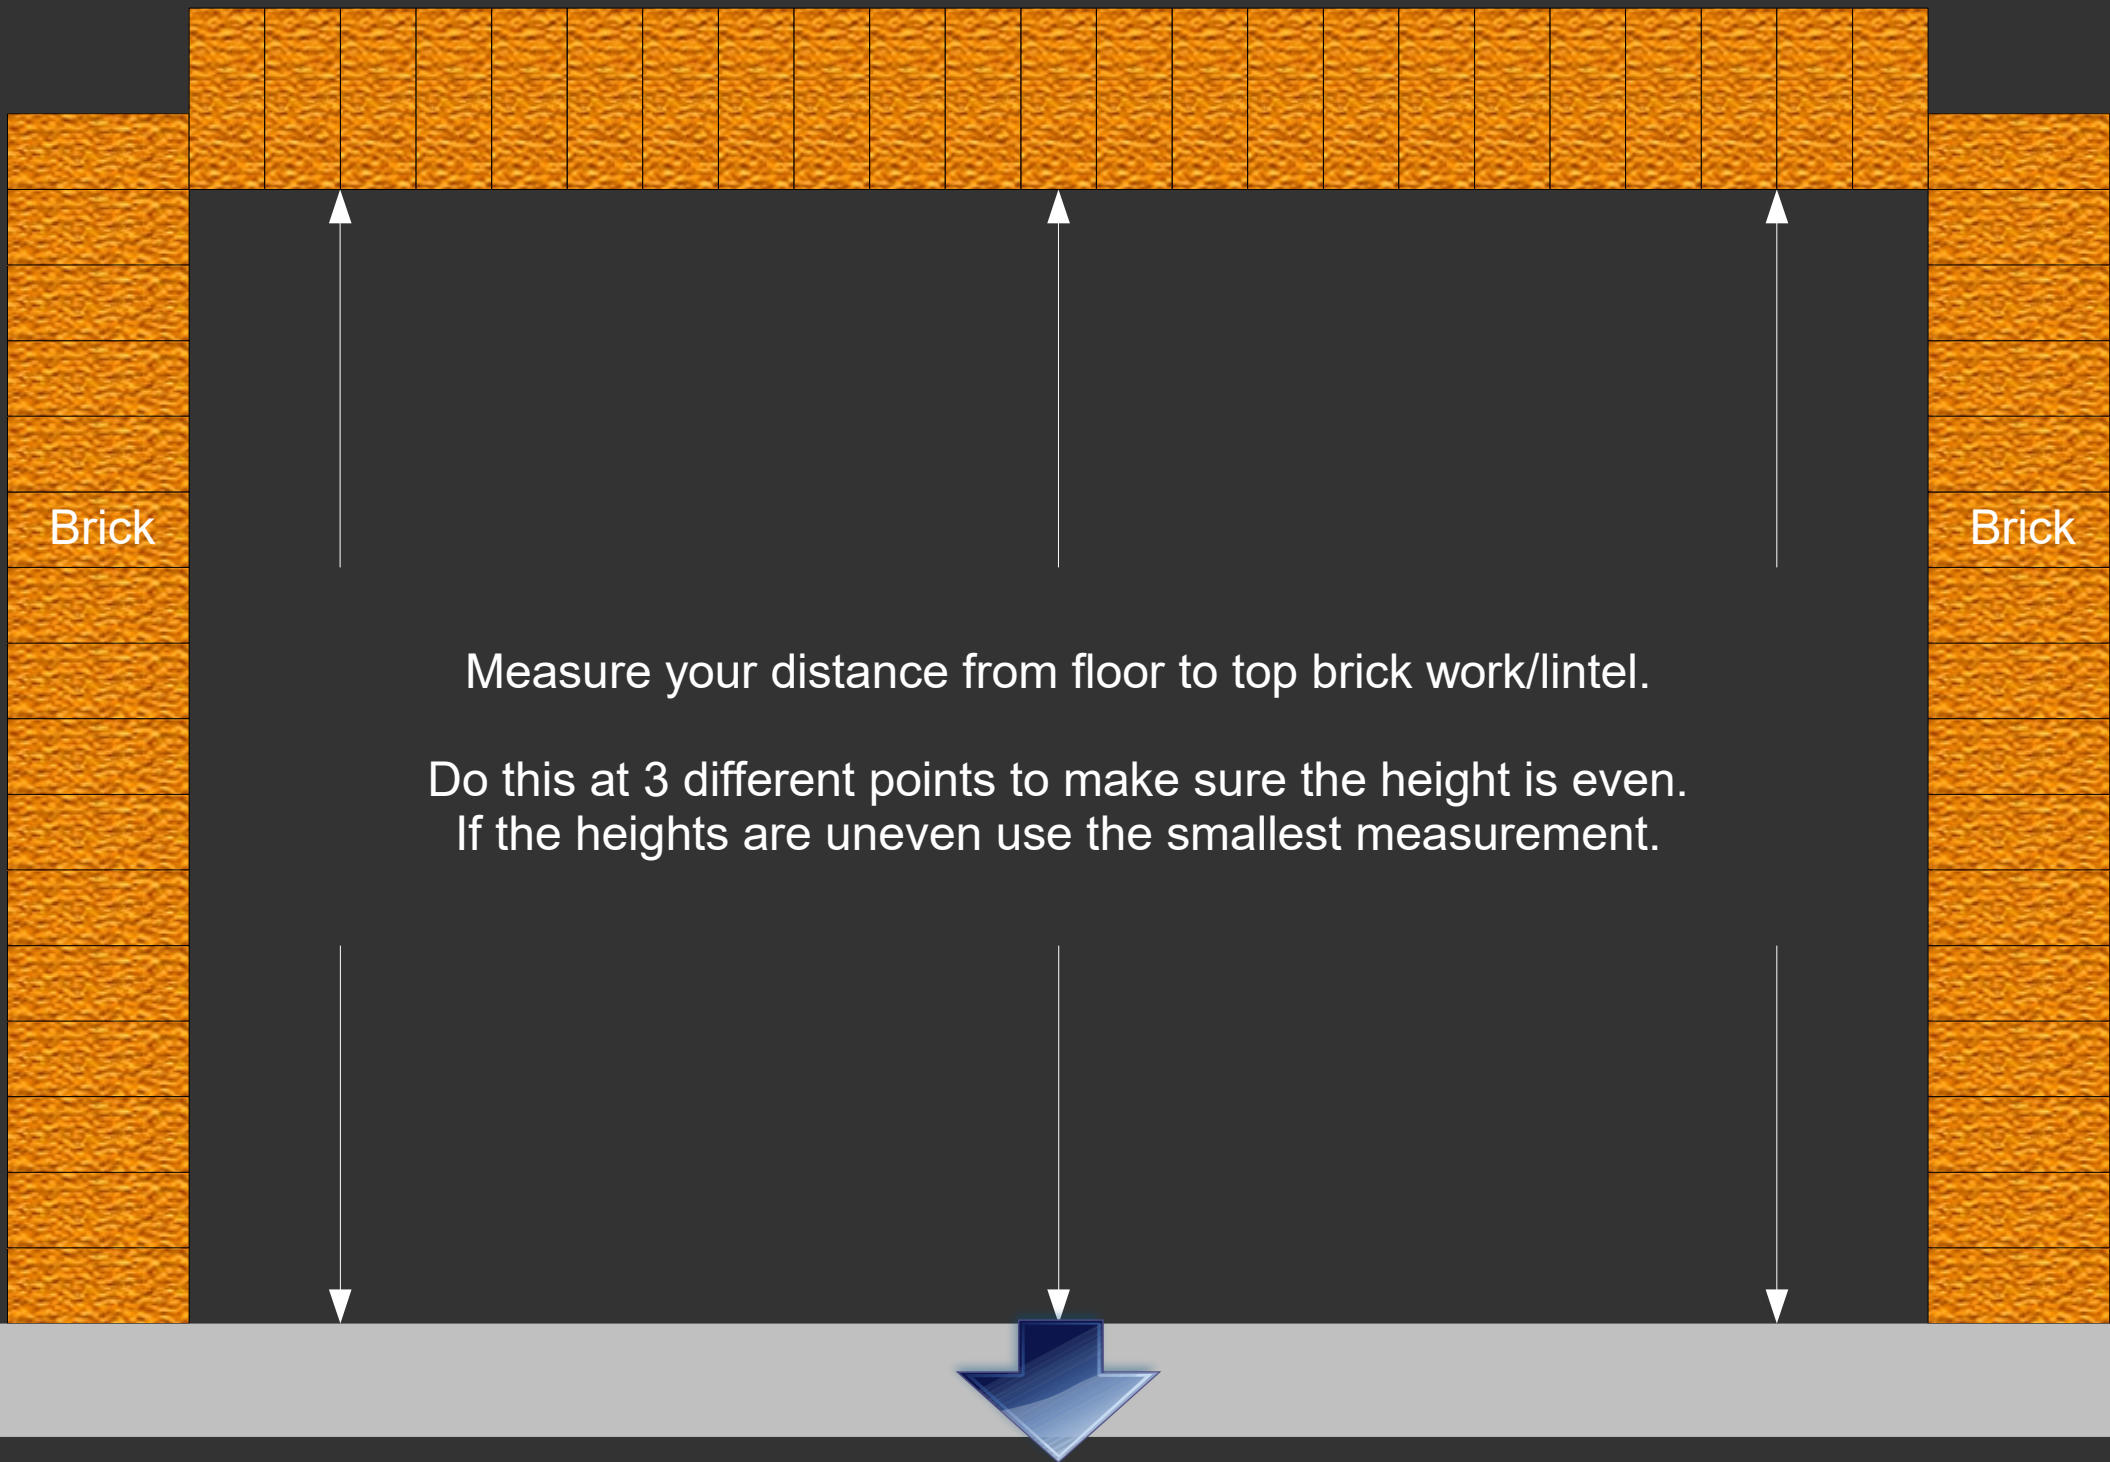


Brick

Brick

Measure your distance from floor to top brick work/lintel.

Do this at 3 different points to make sure the height is even.
If the heights are uneven use the smallest measurement.

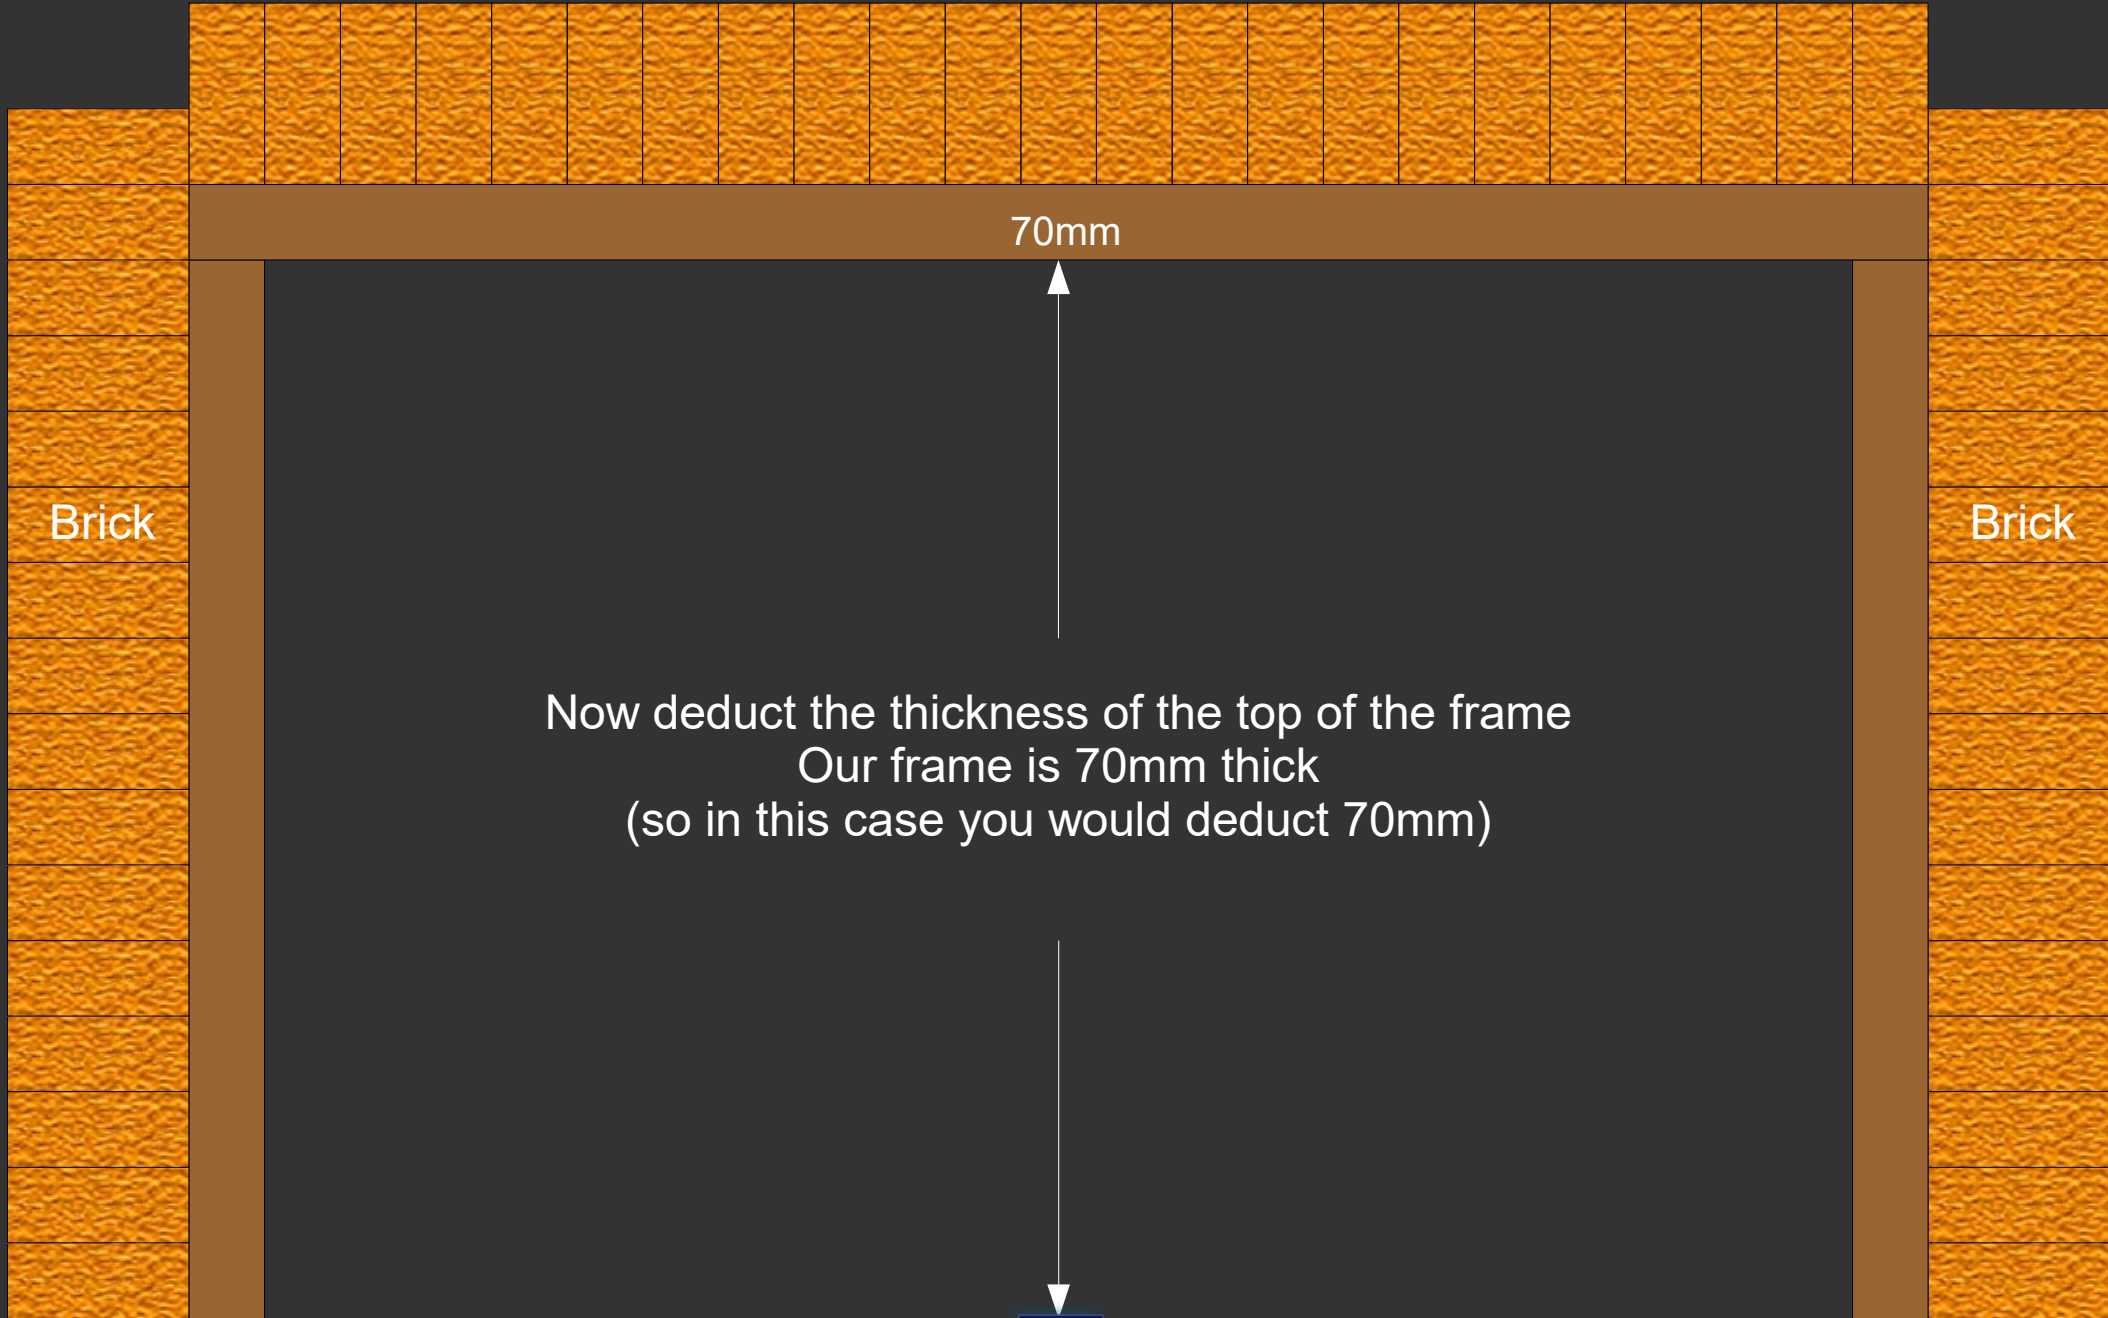



70mm

Brick

Brick

Now deduct the thickness of the top of the frame
Our frame is 70mm thick
(so in this case you would deduct 70mm)

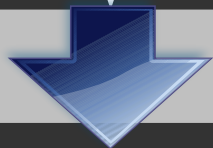

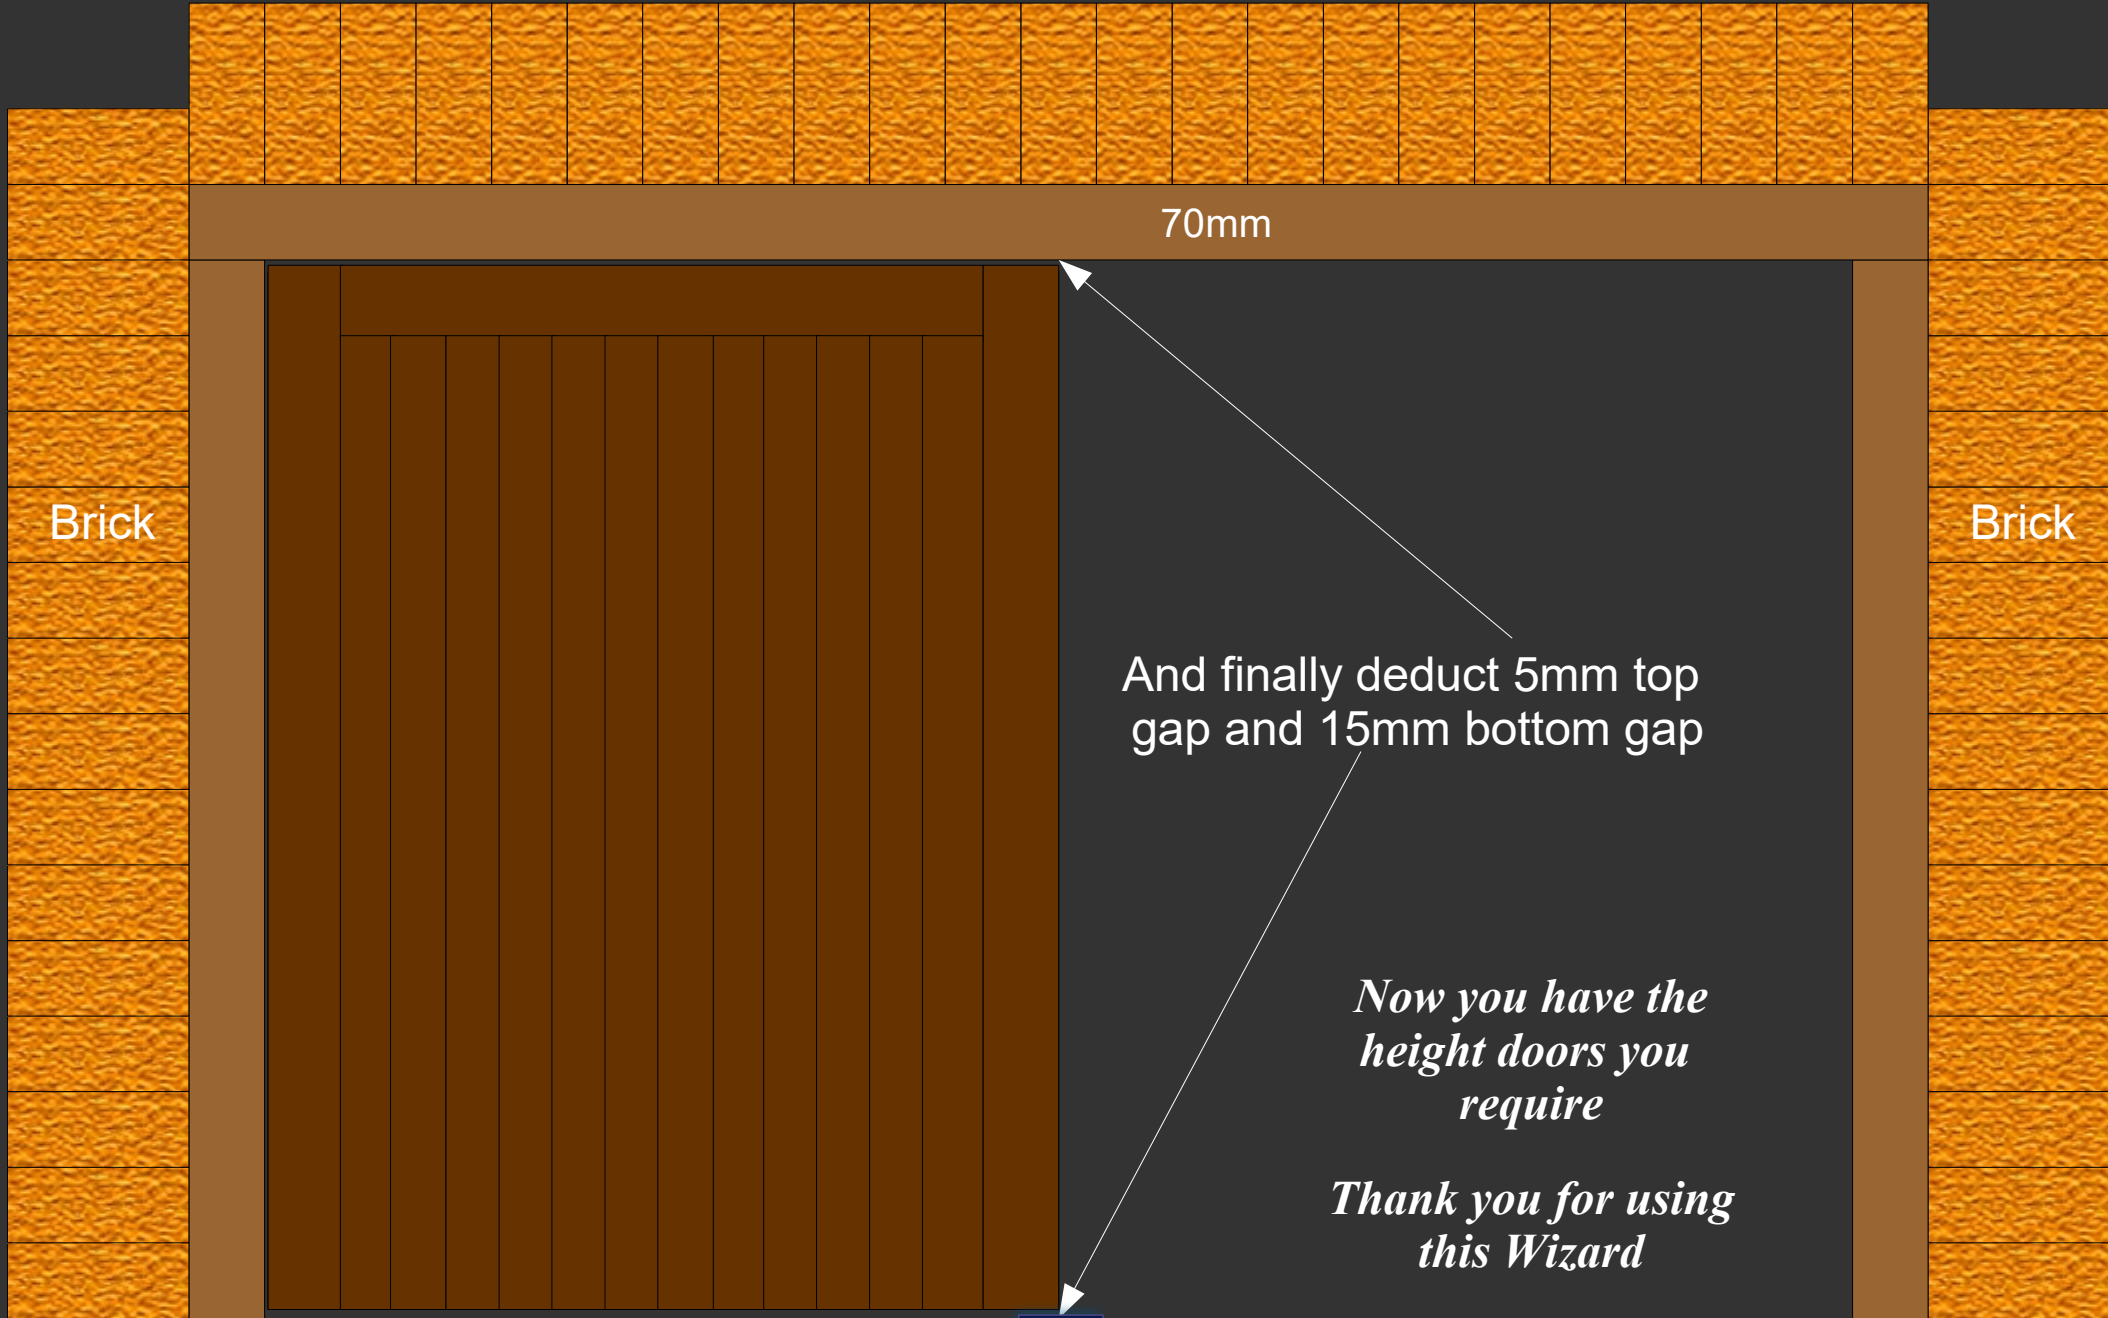

70mm

Brick

Brick

And finally deduct 5mm top gap and 15mm bottom gap

Now you have the height doors you require

Thank you for using this Wizard



*Now just close this window/tab
to return to our website*