



How do I work out my sizes?

Click for next step

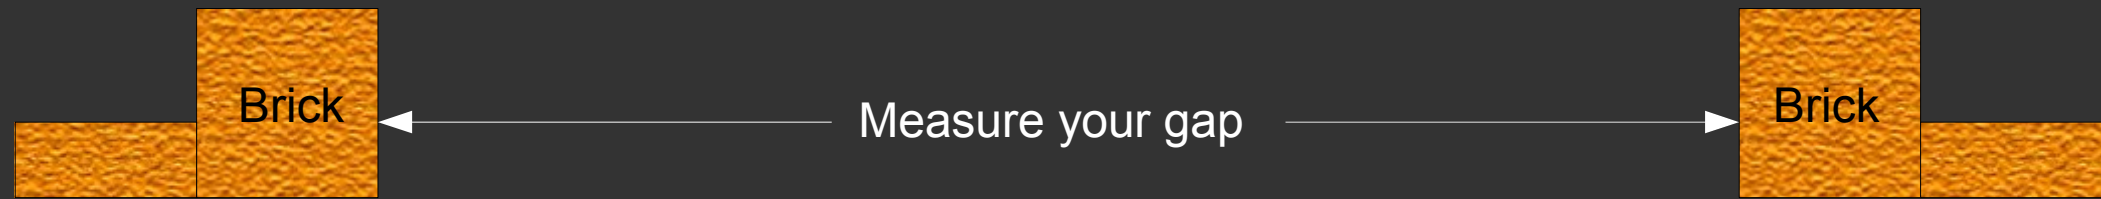


Click for next step

Deduct your frame size

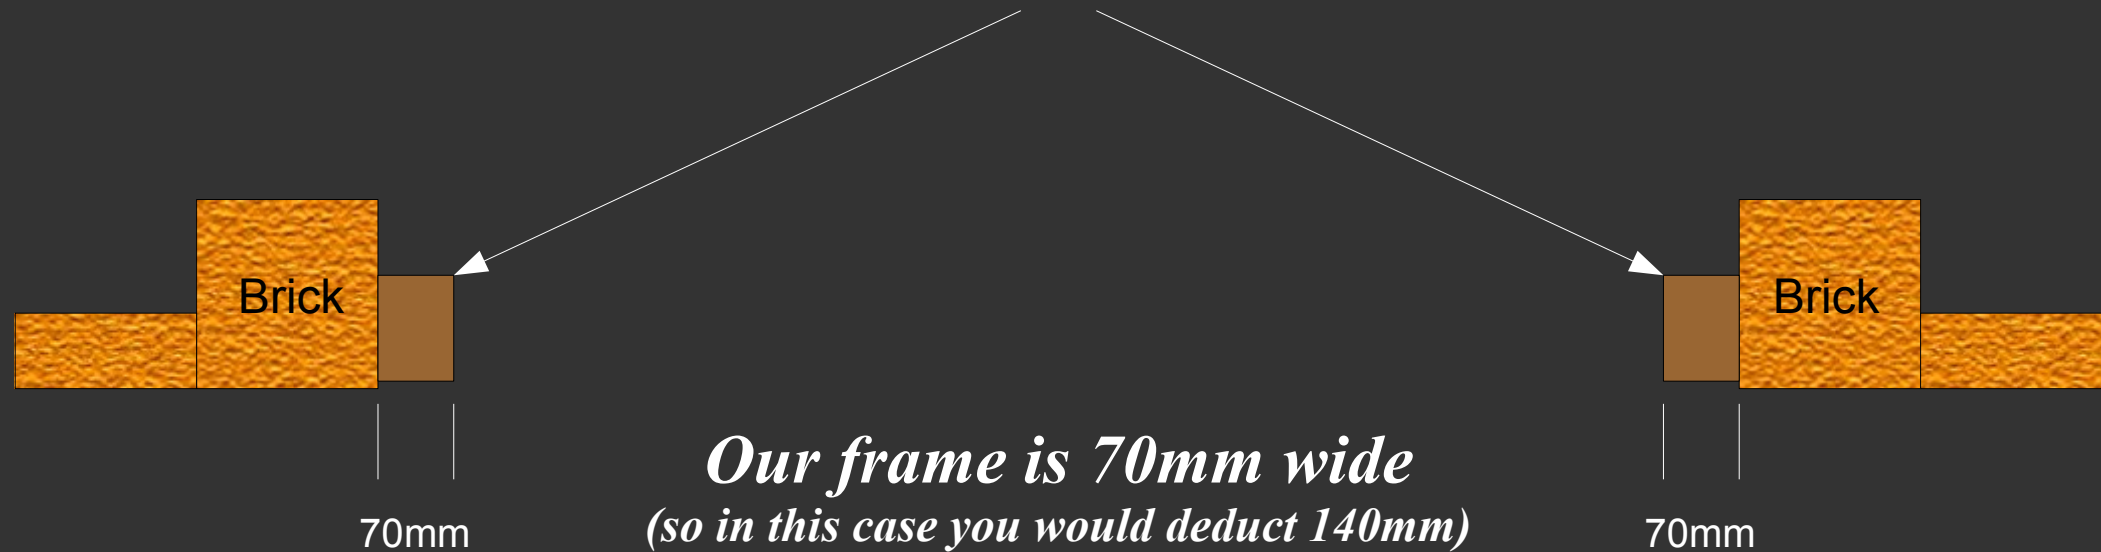


Click for next step

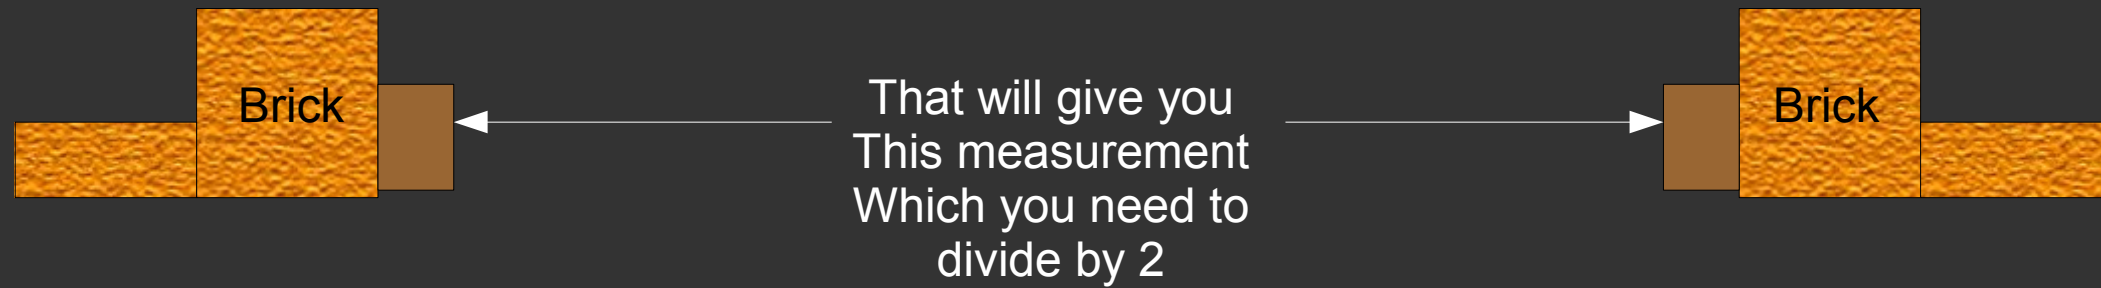


Click for next step

Now we know the width of each door

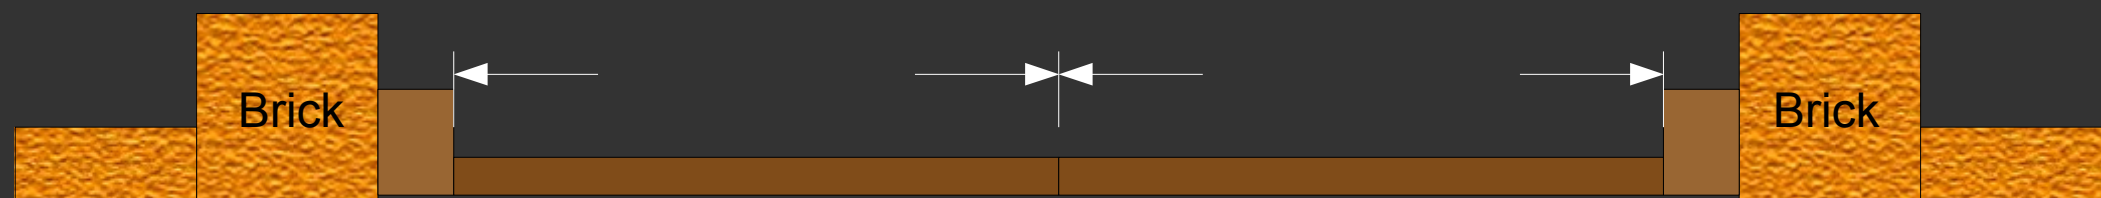

Click for next step


Now we cut a 15mm overlap rebate into the doors and this will also give the required 5mm breather gaps

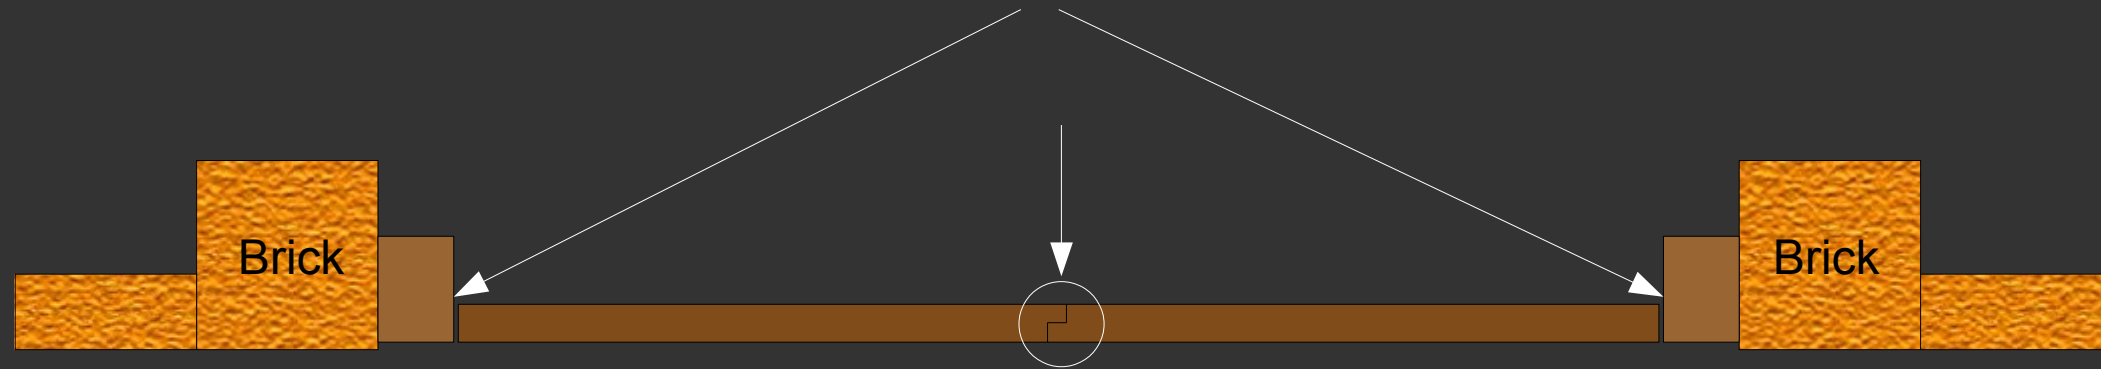

Click for next step

How do I work out my Height?

Click for next step

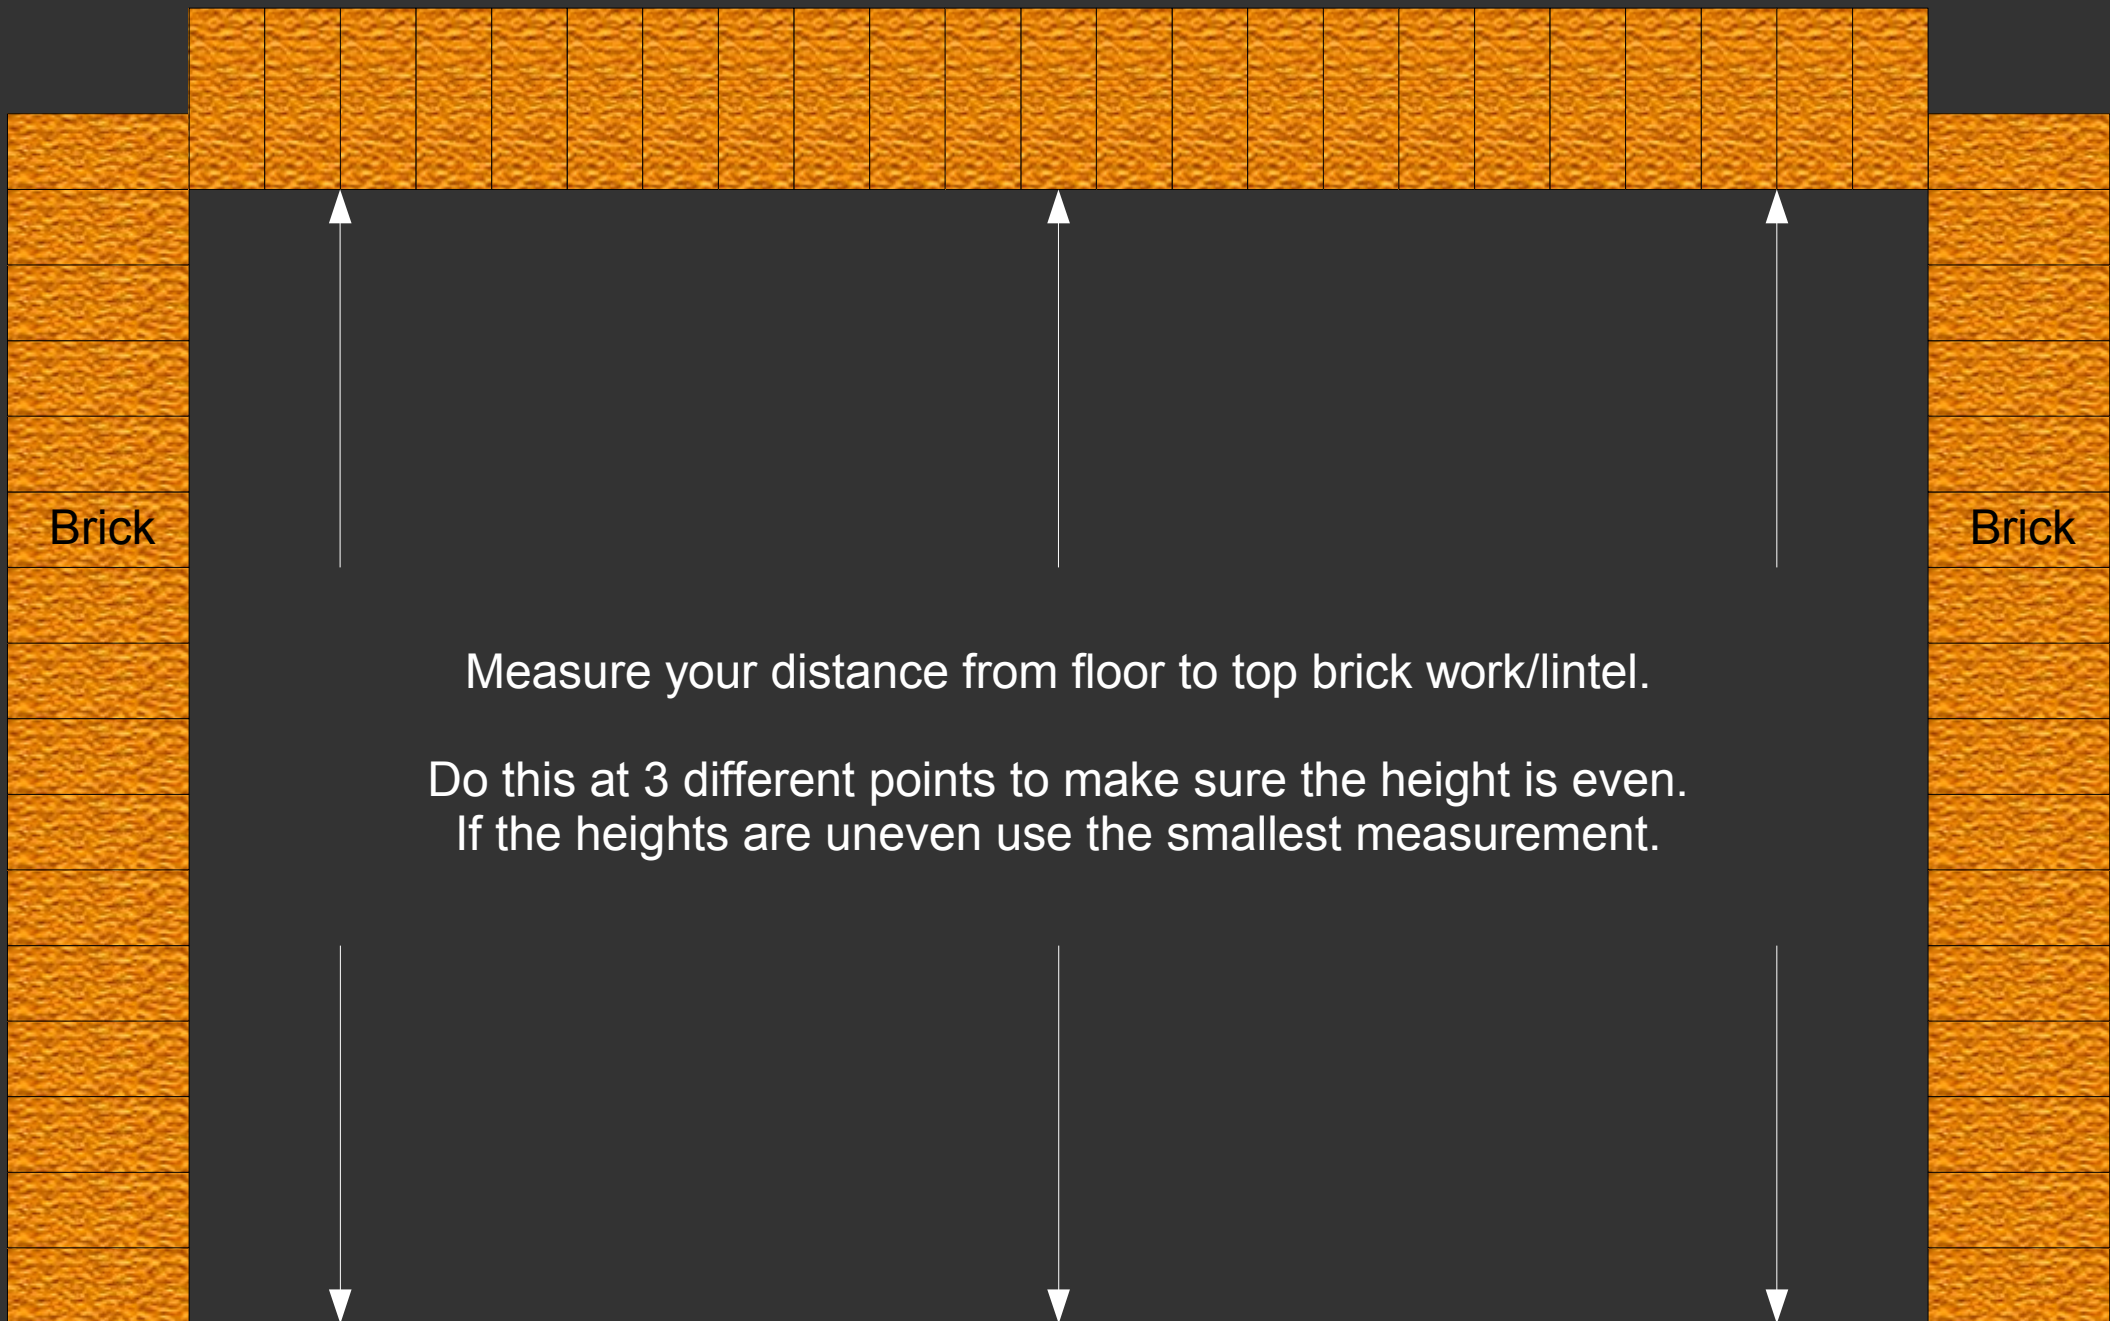


Brick

Brick

Measure your distance from floor to top brick work/lintel.


Do this at 3 different points to make sure the height is even.
If the heights are uneven use the smallest measurement.

Click for next step

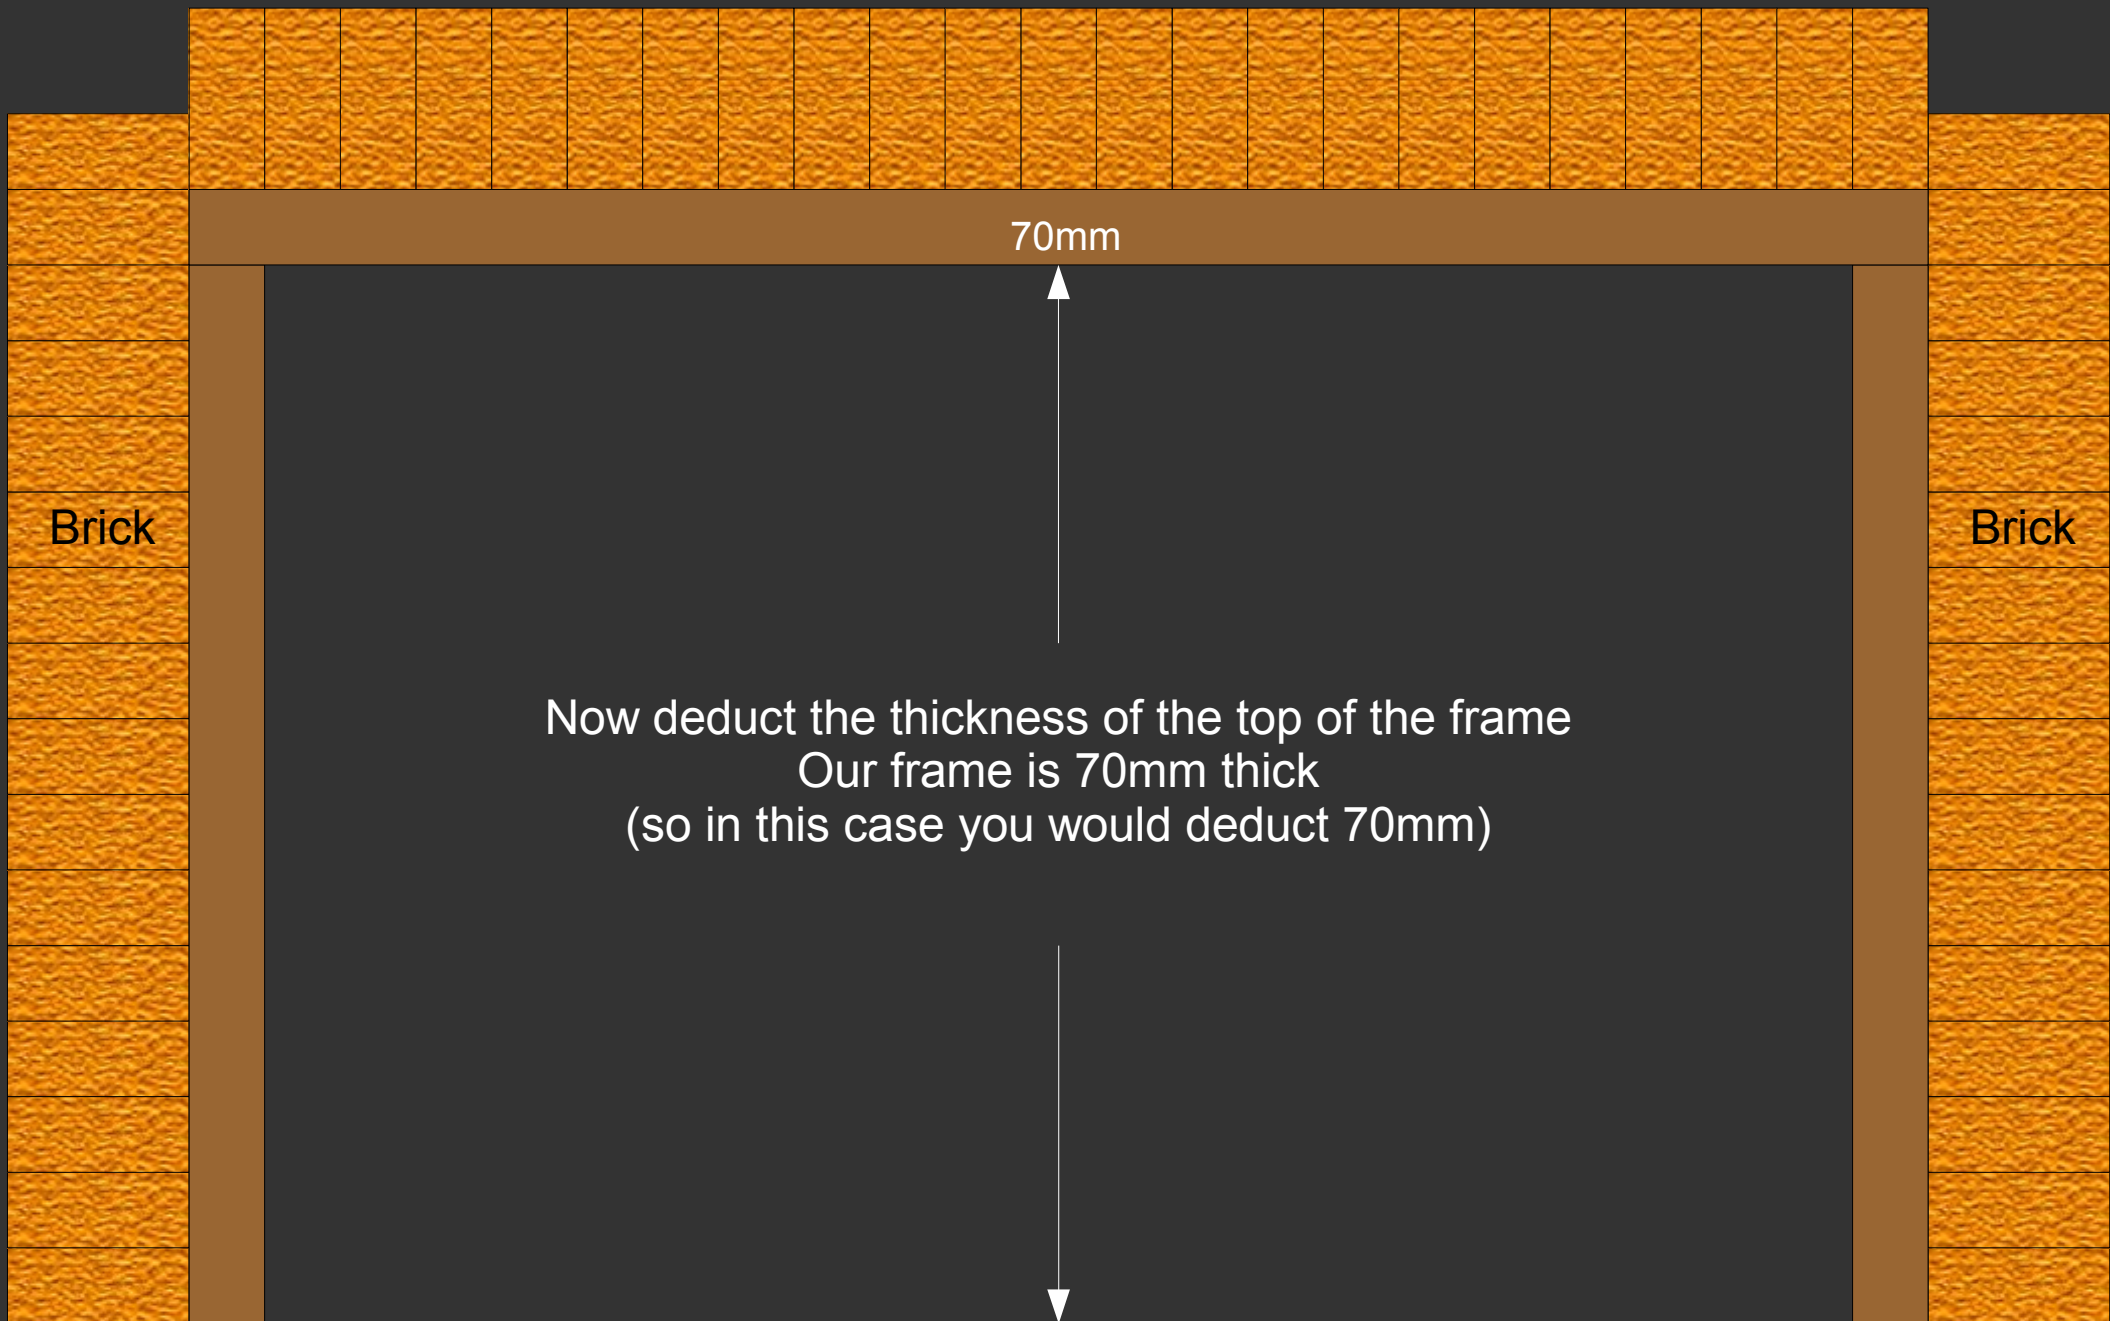

Now deduct the thickness of the top of the frame
Our frame is 70mm thick
(so in this case you would deduct 70mm)

Click for next step

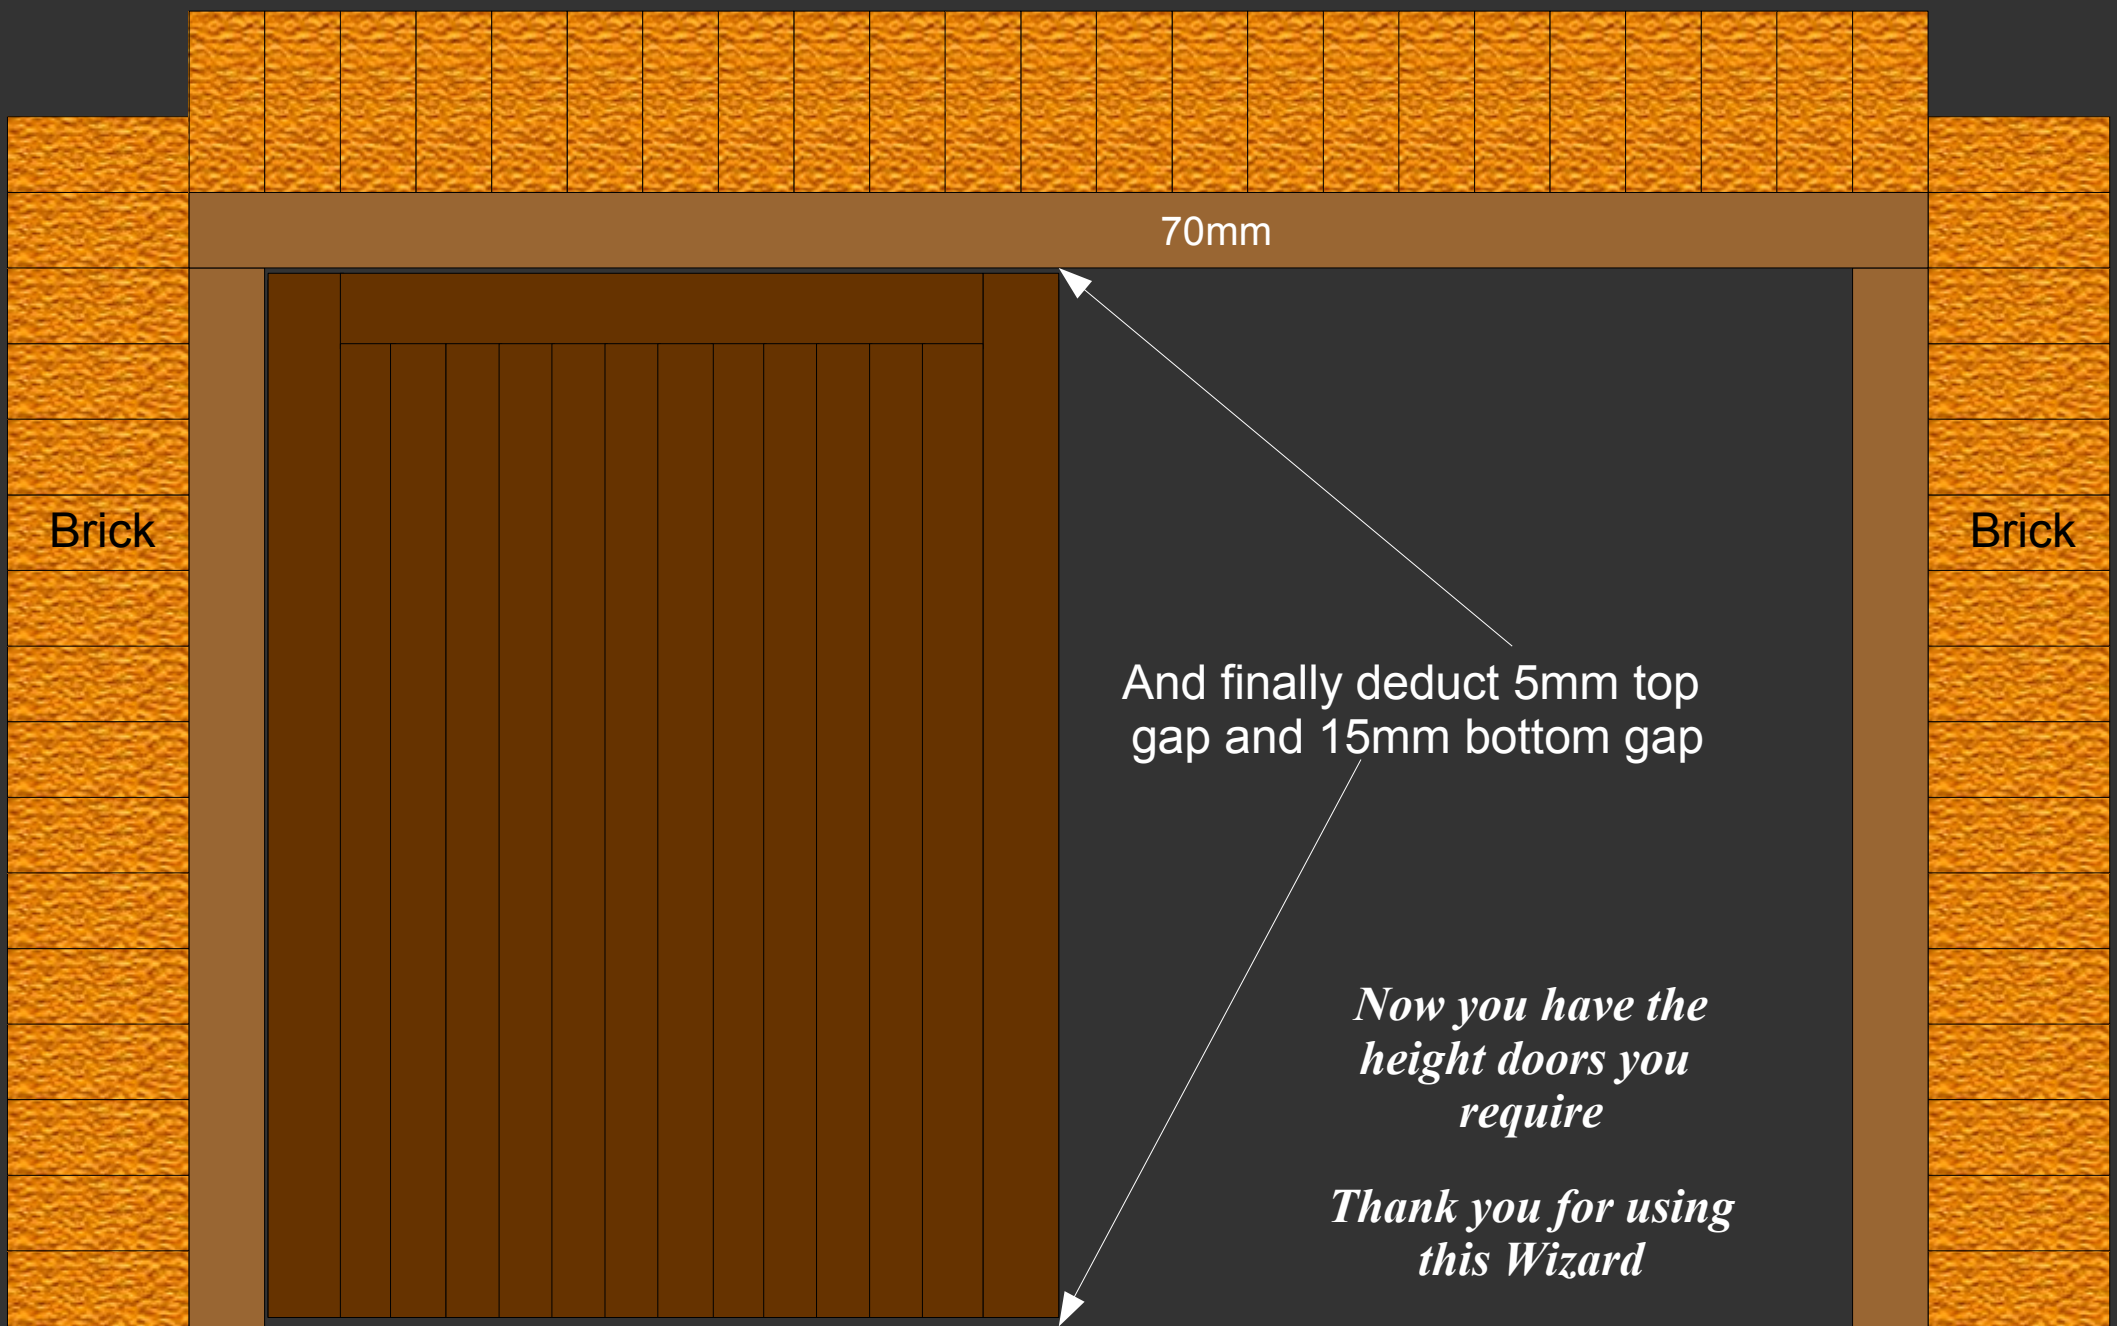

70mm

Brick

Brick

And finally deduct 5mm top gap and 15mm bottom gap

Now you have the height doors you require

Thank you for using this Wizard

Click for next step

*Now just close this window to
return to our website*

Back